

ANTISWAY BRACE USAGE GUIDE

FIXTURE WIDTH




FIXTURE HEIGHT

	24"	36"	48"
49"	AB-50	AB-50	AB-67
61"	AB-50	AB-67	AB-67
75"	AB-67	AB-67	AB-67
87"	AB-67	AB-67	AB-67
99"	AB-67	AB-67	AB-104
111"	AB-104	AB-104	AB-104
123"	AB-104	AB-104	AB-104
135"	AB-104	AB-104	AB-104
147"	AB-104	AB-104	AB-104

AB INSTALLATION

1. STAND GABLES UPRIGHT.
2. INSTALL FLATTOP AND KICKBASE, IF APPLICABLE, AT TOP AND BOTTOM OF FIXTURE.
3. HOOK AB RODS NEAR TOP OF FIXTURE AND BRING TURNBUCKLE END TO OPPOSITE GABLE. TIGHTEN TURNBUCKLE JUST ENOUGH TO HOLD FIXTURE UPRIGHT (THE UNIT IS NOW SELF STANDING).
4. INSTALL REMAINING FIXTURE COMPONENTS (SLATWALL, SHELVES, ETC).
5. FULLY TIGHTEN AB'S WHILE CHECKING WITH LEVEL TO ENSURE GABLES ARE PLUMB.

ANTI-SWAY BRACES	
PART #	L
AB-50	46-5/8"
AB-67	63-11/16"
AB-104	101-1/2"

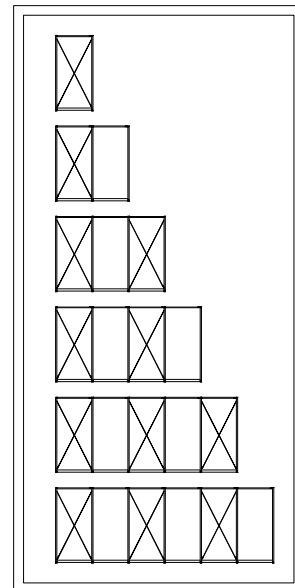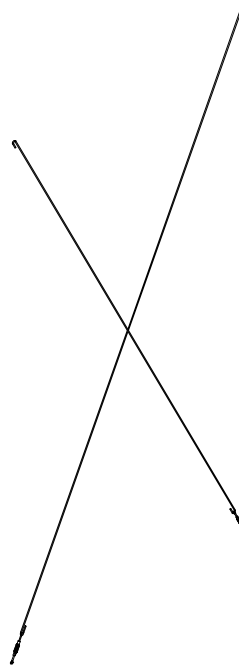

- * (2) AB'S NEEDED PER (1) UNIT.
- * AB'S ARE NEEDED EVERY OTHER FIXTURE WHEN IN A RUN (SEE CHART TO ABOVE).

ANTI-SWAY BRACING RODS